

Printer Compatibility List for TL-PS110P/TL-PS110U

2008.09.24

| No | Printer's Brand | Printer's Type |
|----|-----------------|-----------------|
| 1 | Avision | MF 3200 |
| 2 | Avision | MF 3230 |
| 3 | Brother | MFC4800 |
| 4 | Brother | MFC4800J |
| 5 | Brother | MFC6800 |
| 6 | Brother | MFC7220 |
| 7 | Brother | MFC7420 |
| 8 | Brother | MFC8840D |
| 9 | Brother | MFC210C |
| 10 | Brother | IntelliFax 2820 |
| 11 | CANON | S200SPX |
| 12 | CANON | I450 |
| 13 | CANON | I550 |
| 14 | CANON | I850 |
| 15 | CANON | I950 |
| 16 | CANON | I255 |
| 17 | CANON | I355 |
| 18 | CANON | I455 |
| 19 | CANON | I470D |
| 20 | CANON | I475D |
| 21 | CANON | I560 |
| 22 | CANON | I850 |
| 23 | CANON | I865 |
| 24 | CANON | I6100 |
| 25 | CANON | I6500 |
| 26 | CANON | I9100 |
| 27 | CANON | I9950 |
| 28 | CANON | IX4000 |
| 29 | CANON | IX5000 |
| 30 | CANON | Imageclass D380 |
| 31 | CANON | BJF9000 |
| 32 | CANON | PIXMA ip1000 |
| 33 | CANON | PIXMA ip1800 |
| 34 | CANON | PIXMA ip2000 |
| 35 | CANON | PIXMA ip3000 |
| 36 | CANON | PIXMA ip3300 |
| 37 | CANON | PIXMA ip3500 |
| 38 | CANON | PIXMA ip4000 |
| 39 | CANON | PIXMA ip4200 |
| 40 | CANON | PIXMA ip4500 |
| 41 | CANON | PIXMA ip5000 |

| | | |
|----|-------------|--------------|
| 42 | CANON | PIXMA ip6000 |
| 43 | CANON | PIXMA ip8500 |
| 44 | CANON | MP-110 |
| 45 | CANON | MP-130 |
| 46 | CANON | MP-150 |
| 47 | CANON | MP-160 |
| 48 | CANON | MP730 |
| 49 | CANON | MP770 |
| 50 | CANON | MX 318 |
| 51 | CANON | MX 700 |
| 52 | DOCUJET | 1610F |
| 53 | DOCUJET | UA1610 |
| 54 | Epson Japan | MC-2000 |
| 55 | Epson Japan | PM-4000PX |
| 56 | Epson Japan | PM-3700C |
| 57 | Epson Japan | PM-3500C |
| 58 | Epson Japan | PM-2200C |
| 59 | Epson Japan | PM-890C |
| 60 | Epson Japan | PM-920C |
| 61 | Epson Japan | PM-930C |
| 62 | Epson Japan | PM-950C |
| 63 | Epson Japan | PM-970C |
| 64 | Epson Japan | PM-980C |
| 65 | Epson Japan | PM-A970 |
| 66 | Epson Japan | PM-A950 |
| 67 | Epson Japan | PM-A940 |
| 68 | Epson Japan | PM-A920 |
| 69 | Epson Japan | PM-A900 |
| 70 | Epson Japan | PM-A890 |
| 71 | Epson Japan | PM-A850 |
| 72 | Epson Japan | PM-A840 |
| 73 | Epson Japan | PM-A820 |
| 74 | Epson Japan | PM-A720 |
| 75 | Epson Japan | PM-A650 |
| 76 | Epson Japan | PM-A620 |
| 77 | Epson Japan | PM-A550 |
| 78 | Epson Japan | PM-D1000 |
| 79 | Epson Japan | PM-D870 |
| 80 | Epson Japan | PM-D800 |
| 81 | Epson Japan | PM-FA700 |
| 82 | Epson Japan | PM-G860 |
| 83 | Epson Japan | PM-G850 |
| 84 | Epson Japan | PM-G820 |
| 85 | Epson Japan | PM-G800 |
| 86 | Epson Japan | PM-G4500 |

| | | |
|-----|-------------|-------------------|
| 87 | Epson Japan | PM-T990 |
| 88 | Epson Japan | PM-T960 |
| 89 | Epson Japan | PX-5500 |
| 90 | Epson Japan | PX-A640 |
| 91 | Epson Japan | PX-A740 |
| 92 | Epson Japan | PX-G5300 |
| 93 | Epson Japan | PX-G5100 |
| 94 | Epson Japan | PX-G930 |
| 95 | Epson Japan | PX-G5000 |
| 96 | Epson Japan | PX-V780 |
| 97 | Epson Japan | CL-760 |
| 98 | Epson Japan | LP-9500C |
| 99 | Epson Japan | LP-8800C |
| 100 | Epson Japan | LP-8700 |
| 101 | Epson Japan | LP-7700 |
| 102 | Epson Japan | E-720 |
| 103 | Epson Japan | E-520 |
| 104 | Epson Japan | E-300L |
| 105 | Epson Japan | CC-500L |
| 106 | EPSON | Aculaser C1900 |
| 107 | EPSON | Aculaser C3800 |
| 108 | EPSON | Aculaser C9100 |
| 109 | EPSON | C750 |
| 110 | EPSON | EC-01 |
| 111 | EPSON | LQ-300+II |
| 112 | EPSON | LQ-2090C |
| 113 | EPSON | PictureMate PM250 |
| 114 | EPSON | STYLUS C20 |
| 115 | EPSON | STYLUS C40 |
| 116 | EPSON | STYLUS C41UX |
| 117 | EPSON | STYLUS C43UX |
| 118 | EPSON | STYLUS C45 |
| 119 | EPSON | STYLUS C59 |
| 120 | EPSON | STYLUS C60 |
| 121 | EPSON | Stylus C63 |
| 122 | EPSON | Stylus C67 |
| 123 | EPSON | Stylus C79 |
| 124 | EPSON | Stylus C90 |
| 125 | EPSON | Stylus Color 670 |
| 126 | EPSON | Stylus Color 800 |
| 127 | EPSON | Stylus Color 810 |
| 128 | EPSON | Stylus Color 850 |
| 129 | EPSON | Stylus Color 900 |
| 130 | EPSON | Stylus Color 1160 |
| 131 | EPSON | Stylus Color 1520 |

| | | |
|-----|-------|----------------------|
| 132 | EPSON | Stylus CX-1500 |
| 133 | EPSON | Stylus CX-2900 |
| 134 | EPSON | Stylus CX-3500 |
| 135 | EPSON | Stylus CX-3700 |
| 136 | EPSON | Stylus CX-3900 |
| 137 | EPSON | Stylus CX-4100 |
| 138 | EPSON | Stylus CX-4700 |
| 139 | EPSON | Stylus CX-4900 |
| 140 | EPSON | Stylus CX-5300 |
| 141 | EPSON | Stylus CX-5500 |
| 142 | EPSON | Stylus CX-5900 |
| 143 | EPSON | Stylus CX-6900F |
| 144 | EPSON | Stylus CX-7300 |
| 145 | EPSON | Stylus CX-7800 |
| 146 | EPSON | Stylus CX-8300 |
| 147 | EPSON | Stylus Office T30 |
| 148 | EPSON | Stylus Office TX300F |
| 149 | EPSON | Stylus Office TX700W |
| 150 | EPSON | Stylus Pro 7600 |
| 151 | EPSON | Stylus Photo 915 |
| 152 | EPSON | Stylus Photo 1270 |
| 153 | EPSON | Stylus Photo 1290 |
| 154 | EPSON | Stylus Photo 1390 |
| 155 | EPSON | Stylus Photo 2100 |
| 156 | EPSON | Stylus Photo 710 |
| 157 | EPSON | Stylus Photo 720 |
| 158 | EPSON | Stylus Photo 790 |
| 159 | EPSON | Stylus Photo 810 |
| 160 | EPSON | Stylus Photo 830U |
| 161 | EPSON | Stylus Photo 900 |
| 162 | EPSON | Stylus Photo 915 |
| 163 | EPSON | Stylus Photo EX2 |
| 164 | EPSON | Stylus Photo EX3 |
| 165 | EPSON | Stylus Photo TX600FW |
| 166 | EPSON | Stylus Photo TX800FW |
| 167 | EPSON | Stylus Photo R1800 |
| 168 | EPSON | Stylus Photo R210 |
| 169 | EPSON | Stylus Photo R230 |
| 170 | EPSON | Stylus Photo R250 |
| 171 | EPSON | Stylus Photo R270 |
| 172 | EPSON | Stylus Photo R310 |
| 173 | EPSON | Stylus Photo R350 |
| 174 | EPSON | Stylus Photo R2400 |
| 175 | EPSON | Stylus Photo RX 430 |
| 176 | EPSON | Stylus Photo RX 510 |

| | | |
|-----|-------|----------------------|
| 177 | EPSON | Stylus Photo RX 530 |
| 178 | EPSON | Stylus Photo RX 590 |
| 179 | EPSON | Stylus Photo RX 630 |
| 180 | EPSON | Stylus Photo RX 650 |
| 181 | EPSON | Stylus Photo RX 690 |
| 182 | EPSON | T20 |
| 183 | EPSON | T40W |
| 184 | EPSON | TX100 |
| 185 | EPSON | TX200 |
| 186 | EPSON | EPL5800 |
| 187 | EPSON | EPL5900 |
| 188 | EPSON | EPL6100 |
| 189 | EPSON | EPL6200 |
| 190 | EPSON | LP2500 |
| 191 | EPSON | LP8900 |
| 192 | HP | Color Laserjet 2605 |
| 193 | HP | Color Laserjet 2700N |
| 194 | HP | Color Laserjet 3700 |
| 195 | HP | DeskJet 450C |
| 196 | HP | DeskJet 810C |
| 197 | HP | DeskJet 830C |
| 198 | HP | DeskJet 845C |
| 199 | HP | DeskJet 948C |
| 200 | HP | DeskJet 970CXI |
| 201 | HP | DeskJet 1125C |
| 202 | HP | DeskJet 1180C |
| 203 | HP | DeskJet 1220C |
| 204 | HP | DeskJet 1280 |
| 205 | HP | DeskJet 3325 |
| 206 | HP | DeskJet 3420 |
| 207 | HP | DeskJet 3535 |
| 208 | HP | DeskJet 3743 |
| 209 | HP | DeskJet 3748 |
| 210 | HP | DeskJet 3650 |
| 211 | HP | DeskJet 3820 |
| 212 | HP | DeskJet 3920 |
| 213 | HP | DeskJet 3940 |
| 214 | HP | DeskJet 5440 |
| 215 | HP | DeskJet 5550 |
| 216 | HP | DeskJet 5652 |
| 217 | HP | DeskJet 9300 |
| 218 | HP | DeskJet 9600 |
| 219 | HP | DeskJet 9650 |
| 220 | HP | DeskJet 9800 |
| 221 | HP | Deskjet F4280 |

| | | |
|-----|----|----------------------|
| 222 | HP | DeskJet D2460 |
| 223 | HP | Business Inkjet 1000 |
| 224 | HP | Designjet 100 |
| 225 | HP | LaserJet 1022 |
| 226 | HP | LaserJet 1022N |
| 227 | HP | LaserJet 1160 |
| 228 | HP | LaserJet 1200 |
| 229 | HP | LaserJet 1220 |
| 230 | HP | LaserJet 1300 |
| 231 | HP | LaserJet 1320 |
| 232 | HP | LaserJet 2200D |
| 233 | HP | LaserJet 2300 |
| 234 | HP | LaserJet 2410 |
| 235 | HP | LaserJet 2420 |
| 236 | HP | LaserJet 2500 |
| 237 | HP | LaserJet 2550 |
| 238 | HP | LaserJet 3050 |
| 239 | HP | LaserJet 3055 |
| 240 | HP | LaserJet 3200 |
| 241 | HP | LaserJet 3330 |
| 242 | HP | LaserJet 3380 |
| 243 | HP | LasetJet 4250 |
| 244 | HP | LasetJet 4300 |
| 245 | HP | LasetJet 4650 |
| 246 | HP | LasetJet 5000 |
| 247 | HP | LaserJet 1005 MFP |
| 248 | HP | Laserjet M1120 MFP |
| 249 | HP | Photosmart 2610 |
| 250 | HP | Photosmart 7150 |
| 251 | HP | Photosmart 7550 |
| 252 | HP | Photosmart 7830 |
| 253 | HP | Photosmart C3180 |
| 254 | HP | Photosmart C4180 |
| 255 | HP | Photosmart C4385 |
| 256 | HP | Photosmart C4480 |
| 257 | HP | Photosmart C7280 |
| 258 | HP | Photosmart D5160 |
| 259 | HP | Photosmart D7160 |
| 260 | HP | Photosmart D7260 |
| 261 | HP | PSC 1315 |
| 262 | HP | PSC 1350 |
| 263 | HP | PSC 1410 |
| 264 | HP | PSC 1610 |
| 265 | HP | PSC 2210 |
| 266 | HP | PSC 2310 |

| | | |
|-----|----------------|---------------------|
| 267 | HP | OfficeJet 4255 |
| 268 | HP | OfficeJet 5510 |
| 269 | HP | OfficeJet 5610 |
| 270 | HP | OfficeJet 6210 |
| 271 | HP | Officejet 6310 |
| 272 | HP | OfficeJet 7210 |
| 273 | HP | Officejet J4580 |
| 274 | HP | Officejet K7100 |
| 275 | HP | OfficeJet K850 |
| 276 | HP | OfficeJet Pro K5300 |
| 277 | HP | OfficeJet Pro K550 |
| 278 | IBM | Infoprint 1116 |
| 279 | IBM | Infoprint 1312 |
| 280 | IBM | Infoprint 1316 |
| 281 | IBM | Infoprint 1332 |
| 282 | IBM | Infoprint 1412 |
| 283 | Konica Minolta | Pagepro 9100 |
| 284 | Konica Minolta | Magicolor 2450 |
| 285 | Konica Minolta | Magicolor 5450 |
| 286 | Konica Minolta | Magicolor 7300 |
| 287 | Kyocera | FS-1010 |
| 288 | Kyocera | FS-1010KX |
| 289 | Kyocera | FS-1020 |
| 290 | Kyocera | FS-1920 |
| 291 | Kyocera | FS-820 |
| 292 | Kyocera | FS-920 |
| 293 | Kyocera | FS-6020 |
| 294 | LEXMARK | E230 |
| 295 | LEXMARK | E322 |
| 296 | LEXMARK | T420 |
| 297 | LEXMARK | T620 |
| 298 | LEXMARK | W812 |
| 299 | LEXMARK | Z43 |
| 300 | LEXMARK | Z45 |
| 301 | LEXMARK | Z55 |
| 302 | LEXMARK | Z615 |
| 303 | LEXMARK | Z705 |
| 304 | LEXMARK | Z42 |
| 305 | LEXMARK | Z515 |
| 306 | OKI | B4350 |
| 307 | SAMSUNG | ML-1520 |
| 308 | SAMSUNG | ML-1710 |
| 309 | SAMSUNG | ML-1750 |
| 310 | SAMSUNG | ML-2010 |
| 311 | SAMSUNG | ML-2250 |

| | | |
|------------|----------------|-----------------------|
| 312 | SAMSUNG | ML-2550 |
| 313 | SAMSUNG | CLP 500 |
| 314 | SAMSUNG | CLP 510 |
| 315 | SAMSUNG | SCX-4016 |
| 316 | SAMSUNG | SCX-4100 |
| 317 | XEROX | Phaser 3310 |
| 318 | XEROX | Docuprint 240A |